

# PLYLE®



## view

15.3" Screen Combo DVD / Monitor




PLRDVD15

# TABLE OF CONTENT

<b>1. INSTALLATION GUIDE .....</b>	<b>3</b>
<b>2. FUNCTION KEYS .....</b>	<b>4</b>
2.1 FRONT PANEL OF FUNCTIONS .....	4
<b>3. MONITOR TROUBLE SHOOTING .....</b>	<b>4</b>
3.1 NO POWER .....	4
3.2 REMOTE CONTROL NOT FUNCTIONING .....	4
3.3 NO DISPLAY OR PICTURE NOT CLEAR .....	4
<b>4. SPECIFICATIONS .....</b>	<b>5</b>
<b>5. ACCESSORIES .....</b>	<b>5</b>
<b>6. TYPES OF DISCS PLAYABLE ON THIS PLAYER.....</b>	<b>6</b>
6-1 FRONT PANEL FUNCTION .....	6
<b>7. PART NAMES AND FUNCTIONS .....</b>	<b>7</b>
7.1 REMOTE CONTROL UNIT - MAIN BUTTONS .....	7
7.2 REMOTE CONTROL UNIT - OTHER BUTTONS .....	8
<b>8. PLAYBACK FUNCTIONS .....</b>	<b>9</b>
8.1 LOADING DISC .....	9
8.2 PLAYING DISC .....	9
8.3 DVD .....	9
8.4 TO DISPLAY THE MENU SCREEN .....	9
8.5 STOPPING THE DISC .....	9
8.6 PAUSING THE DISC .....	10
8.7 SCANNING FORWARD AND BACKWARD .....	10
8.8 RETURNING TO THE PREVIOUS CHAPTER OR TRACK OF DVDS, VIDEO CDS AND CDS .....	10
8.9 MOVING AHEAD TO THE NEXT CHAPTER OR TRACK OF DVDS, VIDEO CDS AND CDS .....	10
8.10 REMOVING DISCS .....	10
<b>9. VARIOUS LANGUAGE AND SUBTITLE SETTINGS .....</b>	<b>11</b>
DISC SETTING .....	11
<b>10. SETTING THE PARENTAL LOCK LEVEL .....</b>	<b>11</b>
<b>11. OTHER SETTING .....</b>	<b>12</b>
11.1 VIDEO SETTING .....	12
11.2 DOLBY DIGITAL SETTING .....	12
11.3 DISPLAY SETTING .....	12
<b>12. ADVANCED FUNCTIONS .....</b>	<b>13</b>
12.1 SEARCH FOR A SPECIFIC SCENE .....	13
12.2 VIEWING IN SLOW MOTION DVDS AND VIDEO CDS .....	13
12.3 REPEAT PLAY DVDS, VIDEO CDS AND CDS .....	13
12.4 SELECTING THE PICTURE'S ANGLE (MULTI-ANGLE) .....	13
<b>13. CAUTIONS ON USE .....</b>	<b>14</b>
13.1 HANDING .....	14
13.2 STORING DISCS .....	14
13.3 CLEANING DISCS .....	14
13.4 IRREGULARLY SHAPED DISCS .....	14
<b>14. TROUBLE SHOOTING .....</b>	<b>15</b>


## 1. INSTALLATION GUIDE

 1. On a towel or soft cloth, gently place the monitor unit "facedown" on a stable work surface.
2. Locate the pigtail with the DIN connector.
3. Connect the DIN connector to the interface cable provided.
4. Connect the RED wire to the positive (+) battery terminal.
5. Connect the Black wire to a chassis electrical ground point.
6. Connect the cable with YELLOW RCA jack to Video Input sources for your Video Program material.
7. Connect the cable with RED and WHITE RCA jacks to Audio sources for your Audio Program material.
8. Dome Light Circuit: (NOT SHOWN IN PICTURE) Connect the Black to Ground. Connect one white lead to the dome light circuit that is positive (+) when the door is open. Connect the red lead to a constant positive (+).

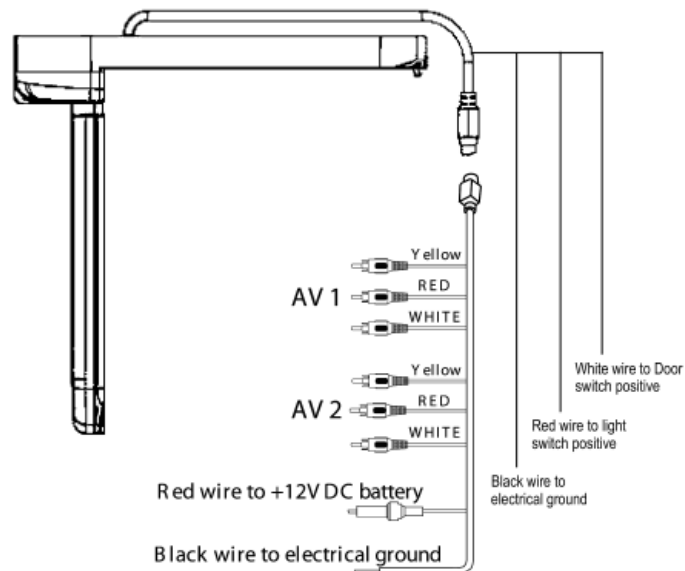

## **2. FUNCTION KEYS**
 
### ***2.1 FRONT PANEL FUNCTIONS***

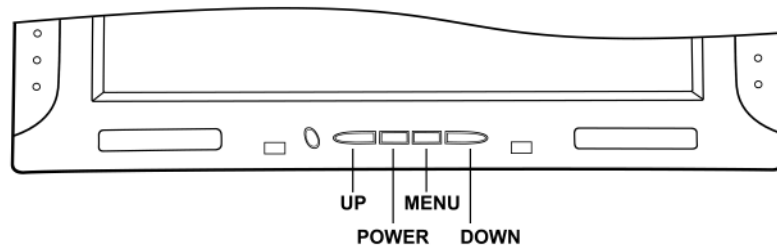

**POWER:** Press the "POWER" button once, To "POWER ON."  
Press it again, to "POWER OFF."

**MENU:** Press MENU to Display OSD. Press again to exit MENU.  
When in sub-menus, press "MENU" to return to the main MENU

**UP/DN:** Use to make item selection in OSD menus and to  
increase/decrease selection parameters.

## **3. MONITOR TROUBLE SHOOTING**

### ***3.1 NO POWER***

1. Make sure the power cable has been plugged in.
2. Check power source for +12V.

### ***3.2 REMOTE CONTROL NOT FUNCTIONING***

1. Make sure the batteries are in good condition and installed properly.
2. Be sure to aim the remote control at the receiver and check to see there are no obstacles in between.
3. Perhaps, it is too far away from the receiver. Normal operating distance is approximately 20 feet.





### ***3.3 NO DISPLAY OR PICTURE NOT CLEAR***

1. Check the video signal wires to ensure they are connected properly.
2. Check for source signal.

#### **4. SPECIFICATIONS**



ITEM	DESCRIPTION
LCD Panel:	15.3" TFT 16:9
Active Area	334.08 (W) x 200.448 (H) mm
Resolution:	1280(H) x 3(RGB) x 768(V)
Display Colors:	262,144 colors
Pixel Pitch (mm):	0.261 (H) x 0.261 (V) mm
Backlight Unit	CCFL Side-light type (two lamp)
Contrast Ratio:	300:1
Brightness (cd/m2):	300
Power Supply:	DC12V±10% less than 1.6A
Viewing angle:	Horizontal: 60° (typ.,left side) , 60° (typ.,right side) Vertical: 40° (typ.,up side) , 60° (typ.,down side)
IR Transmitter	Yes
Power management:	20W power consumption (typ.), less than 3W when in backlight sleep mode.
User's Control:	Power on/off, OSD control
System	1. Auto detection between NTSC/PAL 2. SECAM is available
Dimensional outline(mm):	418mm (W) x 328mm (H) x 38mm (D)
Weight	3.2 kg
Safety certifications	UL, FCC, CE, TUV,
Environmental Condition:	Operation Temp.: 0~50 degree C Storage Temp.: -20~60 degree C Humidity: 10~90%
Disc Format	DVD, DVD+/-R, DVD+/-RW, VCD, MP3, CD, CD-R, CD-RW

#### **5. ACCESSORIES**

- |  |  |
|--|--|
|  PS2/CAR CABLE  |  INSTALLATION BRACKET |
|  SCREW PACK     |  USER MANUAL          |
|  REMOTE CONTROL |  |


 


## 6. TYPES OF DISCS PLAYABLE ON THIS PLAYER

- The discs listed on the table below can be played on this player without an adapter.
- The marks shown on the table below are indicated on the disc's label, package or jacket

Types of playable Discs and their marks	Diameter/playable sides	Playback time
DVD video 	DVD video 12cm/single- 1 layer Sided      2 layer 2cm/double- 1 layer Sided      2 layer	MPEG2 format: 133minutes (4.7GB) 242minutes (8.5GB) 266minutes (9.4GB) 484minutes (17GB)
	DVD video 8cm/single- 1 layer Sided      2 layer 8cm/double- 1 layer Sided      2 layer	MPEG2 format: 41minutes 75minutes 82minutes 150minutes
CD 	12cm/single-sided CD	74minutes
	8cm/single-sided CD	20minutes

 
### 6-1 FRONT PANEL FUNCTIONS

DVD discs of packages include the marks shown below. These marks indicate the type of video or audio signals recorded on the disc and the functions that can be used.

Mark	Meaning
	Indicates the number of audio tracks.
	Indicates the number of angles.
	Indicates the selectable picture aspect ratio.
	Indicates the playable region number.

## 7. PART NAMES AND FUNCTIONS

### 7.1 Remote Control Unit - Main Buttons

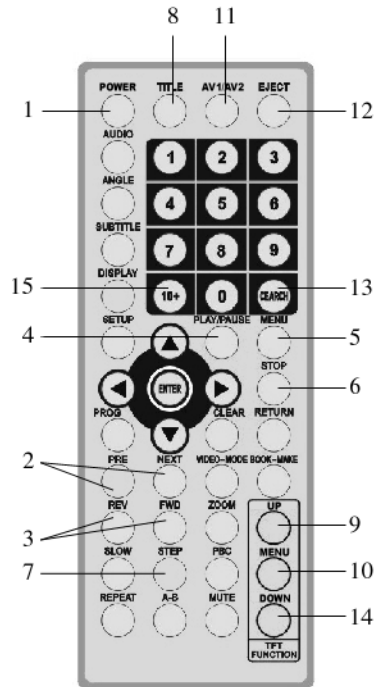

#### 1. POWER Button

The power turns on or off when this button is pressed.

#### 2. PRE/NEXT Buttons

Use these buttons to search for the beginnings of tracks or chapters.

#### 3. REV/FWD-Scan Buttons

Use these buttons to scan forward or backward pictures or sound.

#### 4. PLAY/PAUSE Button

Use this button to play picture or sound or stop temporarily.

#### 5. MENU Button

Press this button to display the DVD's menu screen

#### 6. STOP Button

Press this button to stop playback of the picture or sound.

#### 7. STEP Button

Press this button for step-by-step playback.

#### 8. TITLE Button

Press this button to display the DVD's title.

#### 9. UP Button

Press this button to increase value.

#### 10. MODE Button

Press this button to switch LCD mode: Monitor, Brightness, Color, Reverse.

Then press ▲/▼ to adjust:

Monitor: Screen size--16:9 or 4:3

Brightness: Level 0 to Level 100

Color: Level 0 to Level 100

#### 11. AV1/AV2 Button

Press this button to switch between AV1 and AV2 functions.

#### 12. EJECT Button

Press this to slide the disc out or in.

#### 13. SEARCH Button

Locating a title/ chapter/ time and playing.

 
#### 14. DOWN Button

Press this button to decrease value.

#### 15. 10+ Button

This button is used to select a program of which the sequence number on the disc is more than 10.

## 7.2 Remote Control Unit - Other Buttons

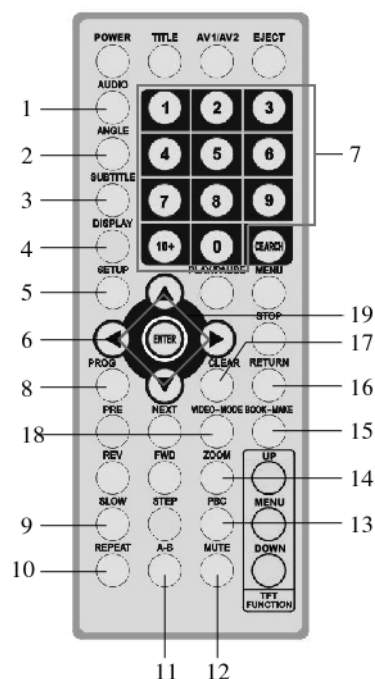

1. **AUDIO Button**  
Press this button to switch the audio Languages.
2. **ANGLE Button**  
Press it to switch the picture's angle.
3. **SUBTITLE Button**  
Press it to switch the program's subtitle languages.
4. **DISPLAY Button**  
Press it to display the disc Information.
5. **SETUP Button**  
Press it to enter or quit the SETUP Menu.
6. **ENTER Button**  
Press it to enter setting.
7. **NUMERICAL Buttons**  
Press these buttons to input numbers.

8. **PROGRAM Button**  
Use this button to program individually.
9. **SLOW Button**  
Press this button to slow playback at 1/2, 1/4, 1/6 speed.
10. **REPEAT Button**  
For DVDs, use it to play title or chapters repeatedly. For CDs, use it to play tracks or the entire disc repeatedly.
11. **A-B Button**  
Press it during playback to set Point A and Point B and then the program between Point A and B can be played repeatedly.
12. **MUTE Button**  
Press the button during playback to stop the audio output. Press it again to resume.
13. **PBC Button**  
Playback control
14. **ZOOM Button**  
Zoom in or zoom out the picture on screen.
15. **BOOK- MARK Button**  
Press this button to bookmark function.
16. **RETURN Button**  
Press this button to return to the previous item
17. **CLEAR Button**  
Clear the numbers which have been input.
18. **VIDEO MODE Button**  
Select the video mode as NTSC or PAL.
19. **CURSOR (◀/▶ / ▲/▼) Button**  
Use these buttons when select setting items to move the cursor up, down, left and right. Press ◀/▶ buttons to adjust LCD mode.



## **8. PLAYBACK FUNCTIONS**

### ***8.1 Loading Disc***

1. Push to insert the disc
2. If no power supply, the disc will not be inhaled.

**Notes:**

- Do not use cracked or warped discs. Doing so could result in damage.
  - Set the disc securely. Failure to set it securely could result in damage.
  - Set single-sided DVDs or CDs with the label sidefacing upwards.
3. The disc will be automatically inhaled.



### ***8.2 Playing Disc***

Loading the disc

- One of the following messages appears on the LCD: DVD, VCD, CD.
- For some discs, playback starts automatically when the disc is close.
- When discs for which program memories are set, playback starts automatically in the order.

### ***8.3 DVD***

Use the cursor buttons to select the item, then press the ENTER button.

Press the numeral button on the remote control unit to select item.

Example: For DVDs with menu screen

### ***8.4 TO DISPLAY THE MENU SCREEN***

The way in which the menu screen is displayed differs from disc to disc. Press the MENU, TITLE button during playback of DVDs, the RETURN button during PBC playback of video CDs. For details, refer to the documentation included with the disc.

### ***8.5 STOPPING THE DISC***

Press the STOP button.

Resume function (DVDs and Video CDs)

***Hint:***

- For some discs, playback may not start from the position at which was stopped. If the STOP button then the previous is pressed while the resume function is on, playback starts from the beginning of the title.

### **8.6 PAUSING THE DISC**

Press the PLAY/PAUSE button.

Press the button again to resume playback.

### **8.7 Scanning Forward And Backward**

During playback, press the PRE or NEXT button. Reverse direction. Forward direction

### **8.8 RETURNING TO THE PREVIOUS CHAPTER OR TRACK OF DVDS, VIDEO CDS AND CDS**

Press the PRE button during playback.

When pressed, playback returns to the beginning of the previous chapter or track.

### **8.9 MOVING AHEAD TO THE NEXT CHAPTER OR TRACK OF DVDS, VIDEO CDS AND CDS.**

Press the NEXT button during playback.

When pressed once, playback moves forward to the next chapter or track.

### **8.10 REMOVING DISCS**

1. Press the STOP button.
2. Press EJECT button to open the disc.
3. Remove the disc.

## **CAUTION:**

When connecting the player to an external TV monitor, please make sure that (for better audio and visual performance) you switch/adjust the "TV Output Type" (marked → ) as NTSC (default setting) or PAL according to local TV system, as the below SETUP MENU shows:



**OUTPUT TYPE Setting Menu**

## **9. VARIOUS LANGUAGE AND SUBTITLE SETTINGS**

### ***Disc Setting***

 
Select "DISC SETTING" by using the "◀/▶" button on the remote control unit, then press 'ENTER' button to enter the DISC SETTING menu.



**Disc Setting Menu**

## **10. SETTING THE PARENTAL LOCK LEVEL**

Select 'Parental' by using "◀/▶" button on the remote control unit, then press 'ENTER' to enter the submenu.

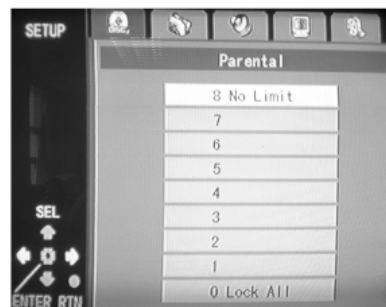

**Rating Setting Screen**

### **Note:**

To avoid the possibility of others using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this Manual.

## 11. OTHER SETTING

### 11.1 *Video Setting*

Select "VIDEO SETTING" by using "◀/▶" button on the remote control unit, then press ENTER button to enter the VIDEO SETTING screen.



**Disc Setting Menu**

### 11.2 *Dolby Digital Setting*

- Select "DOLBY DIGITAL" by using "◀/▶" button on the remote control unit, and then press ENTER to enter the submenu.
- Select the desired Dolby Digital Playing Mode either PCM or BITSTREAM to your choice by using "▲/▼" button on the remote control unit, then press 'ENTER' to confirm the setting.
- Press 'RETURN' to return.

 
**Note:** Normal playing by PCM mode will provide you a non-compressed music which is preferred when you play CD/DVD disc.



**DOLBY DIGITAL Setting**

### 11.3 *Display Setting*

Select "DISPLAY SETTING" by using "◀/▶" button on the remote control unit to enter the display setting menu.

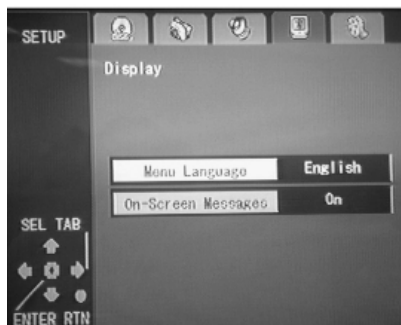


**Display Setting Menu**

## **12. ADVANCED FUNCTIONS**

### **12.1 *Search For A Specific Scene***

 1. Press the SEARCH button.
2. Press the numeral button to select specific time or title/chapter.
3. Press the ENTER button and playback starts from the specific chapter number.

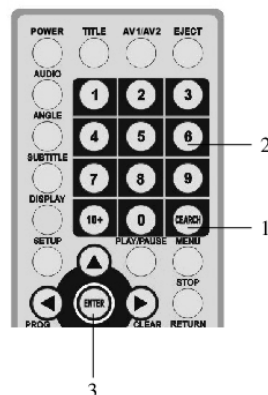

### **12.2 *Viewing In Slow Motion DVDs And Video CDs***

Press the SLOW button during playback, the playback speed becomes 1/2, 1/4, or 1/6 of the normal speed each time you press the SLOW button.

### **12.3 *Repeat Play DVDs, Video CDs And CDs***

- **Repeat A TITLE ,CHAPTER, Or TRACK**

Press the REPEAT button.

- **Repeat A Section Between Point A And B.**

During playback, press A-B button on the remote control unit at the starting point of the section you want to repeat. (Point A)

Press A-B button again at the ending point of the section you want to repeat. (Point B)

Press A-B button again to cancel the A-B repeat function.

### **12.4 *Selecting The Picture's Angle (Multi-Angle)***

Press the ANGLE button while playing back a scene record with multiple angels.

 
## **13. CAUTIONS ON USE**

### ***13.1 Handling***

When holding with both hands



- Do not use damaged (cracked or warped) discs.
- Do not scratch signal surface or let it get dirty.

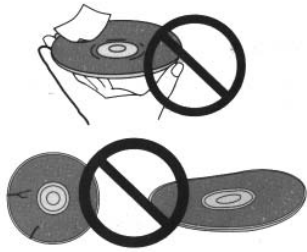

### ***13.2 Storing discs***

- Always place discs in their case and store them vertically.  
Avoid storing discs in hot or humid places, places exposed to direct Sunlight and places in which the temperature is extremely low.
- Read any cautions included with the disc carefully.

### ***13.3 Cleaning Discs***

Fingerprints or dust on discs may reduce sound or picture quality.



Do not use benzene, thinner or other volatile chemicals.

Do not use record spray or an antistatic spray either.

### ***13.4 Irregularly shaped discs***

Irregularly shaped discs (heart-shaped discs, hexagonal discs, etc.) cannot be played on this player.

Doing so could damage the player.

Never use such discs.



## **14. TROUBLE SHOOTING**

### **Picture Disturbed When A DVD Is Recoded On A VCR Or Played Via A VCR**

- This player is compatible with analog copy protect type copy guard. Some discs include copy prohibit signals. Such discs will not play properly when played via a VCR when recoded on a VCR.

### **Play Cannot Be Operated With The Remote Control Unit**

- Remote control unit is too far from the main unit or at too strong an angle with respect to the remote sensor.
- Remote control unit's battery is worn out.

### **TV & Other Device Operate Erroneously**

- The player's remote control unit may cause some TVs with wireless remote control to operate erroneously.

### **No Sound Is Produced From Speakers Or Sound Is Distorted**

- For some discs, 96KHZ digital output of linear PCM audio signals is prohibited.
- Disc is dirty
- Pause or slow play mode is set.
- Main unit's volume is set to the minimum.

### **Volume Different For DVDs And CDs**

- This is due to the different recording methods.

### **No Sound Is Produced Or Sound Is Distorted When Connected To A TV, An Amplifier, Etc.**

- Connection cords are not securely plugged in or not connected.
- Connection plugs or jacks are dirty
- Audio cables are not properly connected.
- DTS audio digital output is connected to a non-compatible AV amplifier, etc.

### **Player Gets Hot**

- This is normal.

#### **Note:**

The player may stop operating properly due to static electricity or other external influences. In this case, unplugging the power cord then plugging it back in will usually resolve the problem. If not, consult your nearest service center.

### **Liquid Crystal Display**

With liquid crystal display, a few picture elements may be black or shine particular color. This is normal.